



Pentax Optio S4i Front and Back Cover Replacement

Remove front and back cover of camera

Written By: Nicole Wong



INTRODUCTION

This guide will teach you how to properly remove the cover of the camera.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Front and Back Cover




- Remove the following screws:
 - Two silver 3.15mm Phillips #00 screws on the right side of the camera
 - Two silver 2.08mm Phillips #00 screws on the left side of the camera

Step 2




- Remove the two indicated screws on the bottom of the camera:
 - The screw circled in red is a longer silver 3.15mm Phillips #00 screw
 - The screw circled in blue is a shorter silver 2.25mm Phillips #00 screw


Step 3

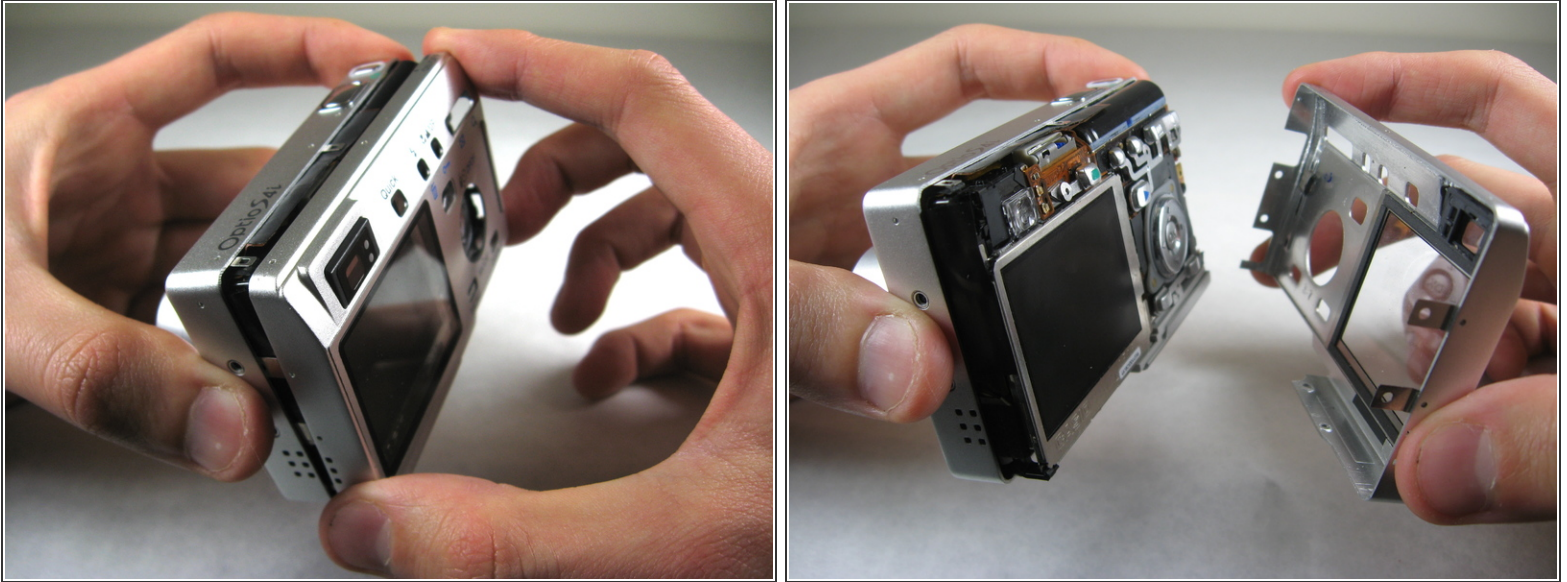

- Carefully pull the back of casing away from the front.



Step 4

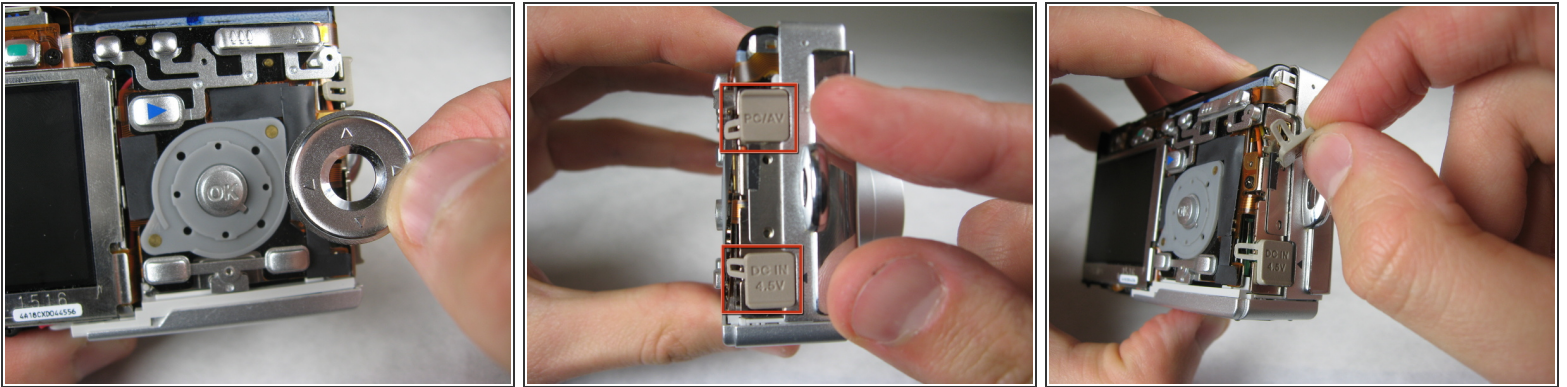

 After removing the back cover, several things must be removed.

- Silver donut-shaped button will fall off. Place separately. Remove the plug covers on the right side of camera, labeled “PC/AV” and “DC IN 4.5V”.

Step 5

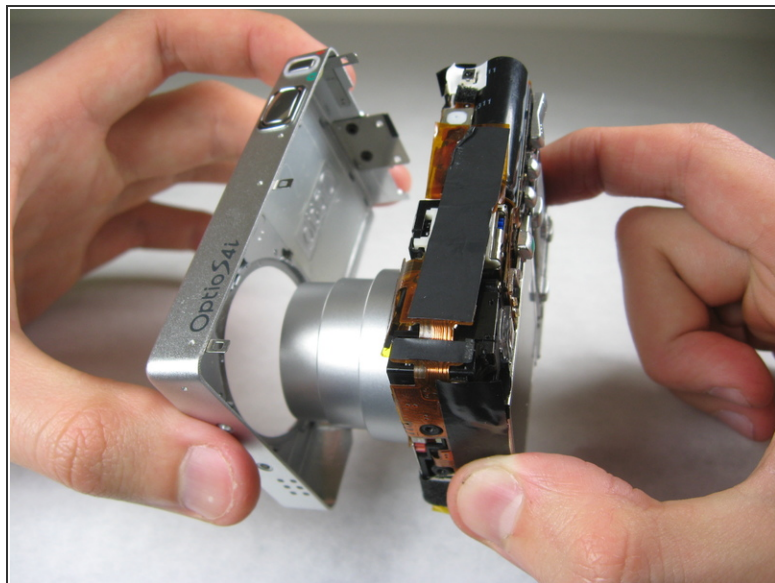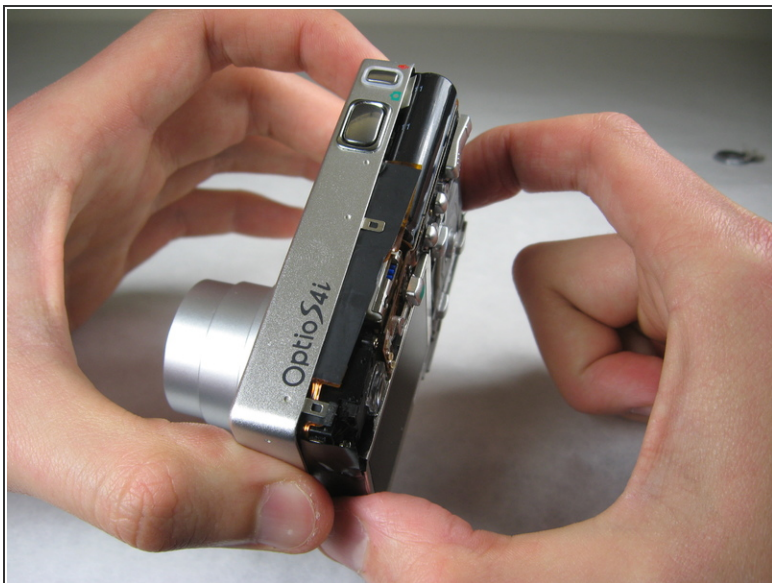

- To remove the front cover, gently hold the inside structure of the camera and slowly pull the front cover off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 03:38:33 PM.